


Wall-mount Bracket Installation Guide

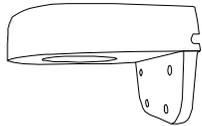

This wall-mount bracket is designed for indoor use.

Package Content

Make sure you have the items below in your box:




Wall-mount Bracket x 1



Screw & Wall Plug x 4

Compatible Camera Type

This bracket is suitable for the three camera types as shown below:

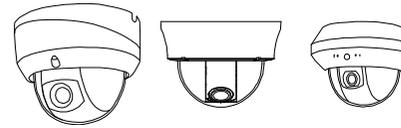

Type A

Type B


Type C

Note before installation

1. This wall-mount bracket is designed for indoor use.
2. Arrange the cables of camera before the wall-mount bracket is attached and secured to a wall.

The screw holes used for installing Type A, Type B & Type C to the bracket are A, B & C on the bracket.

Indication for screw holes on the bracket

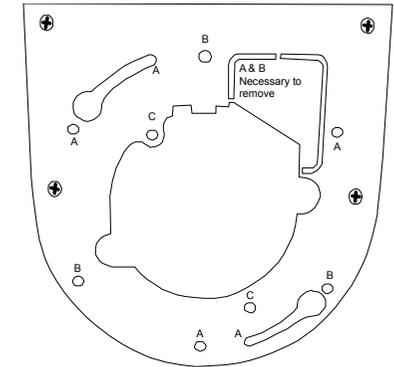

For more details, please refer to the section "Installation".

Installation (Take Type A as an example for pictures)

Step1: Remove the dome cover of the camera, as shown in *Figure 1*.

Then, find the mounting holes (two or three based on the camera type you have) on the camera base, and prepare the screws needed for the camera to attach to the bracket later.

Step2: Locate where you want to install this wall-mount bracket, and drill holes on the wall for securing the bracket and routing the cables (if necessary).

Step3: Attach the bracket to the wall and secure it, as shown in *Figure 2*.

Note: Before the bracket is secured, make sure the cables of the camera is routed and arranged properly in the bracket.

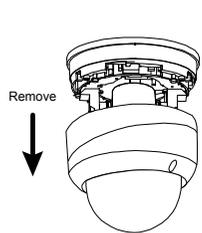


Figure 1

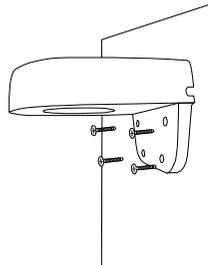


Figure 2

Step4: Align the mounting holes on the camera with the corresponding screw holes on the bracket, make sure the camera lens facing outward, and fasten the camera to the bracket, as shown in *Figure 3*.

- For the **Type A** camera, remove the piece marking with "**A & B Necessary to remove**" on the bracket first, allowing the camera cables to route later. Then, find **A** on the bracket, and secure the camera to it.

Note: Find the **A** as a screw hole only on the bracket. There are three of them.

- For the **Type B** camera, remove the piece marking with "**A & B Necessary to remove**" on the bracket first, allowing the camera cables to route later. Then, find **B** on the bracket, and secure the camera to it.

- For the **Type C** camera, find **C** on the bracket, and secure the camera to it.

Step5: Power on the camera, and make necessary adjustment to its viewing angle and focus.

Step6: Replace the dome cover back to the camera, and the installation is completed, as shown in *Figure 4*.

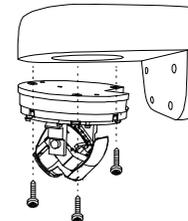


Figure 3

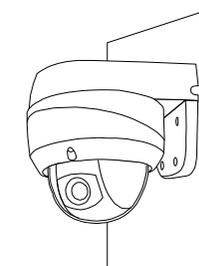


Figure 4