



DS-K1T809 Series Access Control Terminal

User Manual

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope

rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into Dangers and Cautions:

Dangers: Neglecting any of the warnings may cause serious injury or death.

Cautions: Neglecting any of the cautions may cause injury or equipment damage.

	
Dangers: Follow these safeguards to prevent serious injury or death.	Cautions: Follow these precautions to prevent potential injury or material damage.

Dangers

- All the electronic operation should be strictly compliance with the electrical safety regulations, fire prevention regulations and other related regulations in your local region.
- Please use the power adapter, which is provided by normal company. The power consumption cannot be less than the required value.
- Do not connect several devices to one power adapter as adapter overload may cause over-heat or fire hazard.
- Please make sure that the power has been disconnected before you wire, install or dismantle the device.
- When the product is installed on wall or ceiling, the device shall be firmly fixed.
- If smoke, odors or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- Do not ingest battery, Chemical Burn Hazard.
This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the device yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

Cautions

- This equipment is not suitable for use in locations where children are likely to be present.
- Do not drop the device or subject it to physical shock, and do not expose it to high electromagnetism radiation. Avoid the equipment installation on vibrations surface or places subject to shock (ignorance can cause equipment damage).

- Do not place the device in extremely hot (refer to the specification of the device for the detailed operating temperature), cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.
- The device cover for indoor use shall be kept from rain and moisture.
- Exposing the equipment to direct sun light, low ventilation or heat source such as heater or radiator is forbidden (ignorance can cause fire danger).
- Do not aim the device at the sun or extra bright places. A blooming or smear may occur otherwise (which is not a malfunction however), and affecting the endurance of sensor at the same time.
- Please use the provided glove when open up the device cover, avoid direct contact with the device cover, because the acidic sweat of the fingers may erode the surface coating of the device cover.
- Please use a soft and dry cloth when clean inside and outside surfaces of the device cover, do not use alkaline detergents.
- Please keep all wrappers after unpack them for future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and lead to additional costs.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.
- You can view the device License via the website: <http://opensource.hikvision.com/Home/List?id=46>.

Available Models

The access control terminal contains the following models:

Product Name	Model
Access Control Terminal	DS-K1T809MX DS-K1T809EX

Contents

Chapter 1 Appearance	1
Chapter 2 Installation	2
2.1 Installation Environment	2
2.2 Surface Mounting	2
Chapter 3 Device Wiring	6
3.1 External Device Wiring	6
Chapter 4 Operation Commands	7
4.1 Common Commands	7
4.2 Basic Commands	8
4.2.1 Activation	8
4.2.2 Enter and Exit Programming Mode	9
4.3 Other Common Commands	9
4.3.1 Open Door	9
4.3.2 Set Functional Card	11
4.4 Advanced Commands	12
4.4.1 Set Door Parameters	12
4.4.2 Set Voice Parameters	12
4.4.3 Set NFC	13
4.4.4 Set Card Reader Wiegand Mode	13
4.4.5 Restore to Default Settings	13
4.4.6 Restart Device	13
4.4.7 Restore to Factory Settings	13
Appendix A. Legal Information	14
Appendix B. Symbol Conventions	16
Appendix C. Dimension	17

Chapter 1 Appearance

Refer to the following contents for detailed information of the access control terminal:

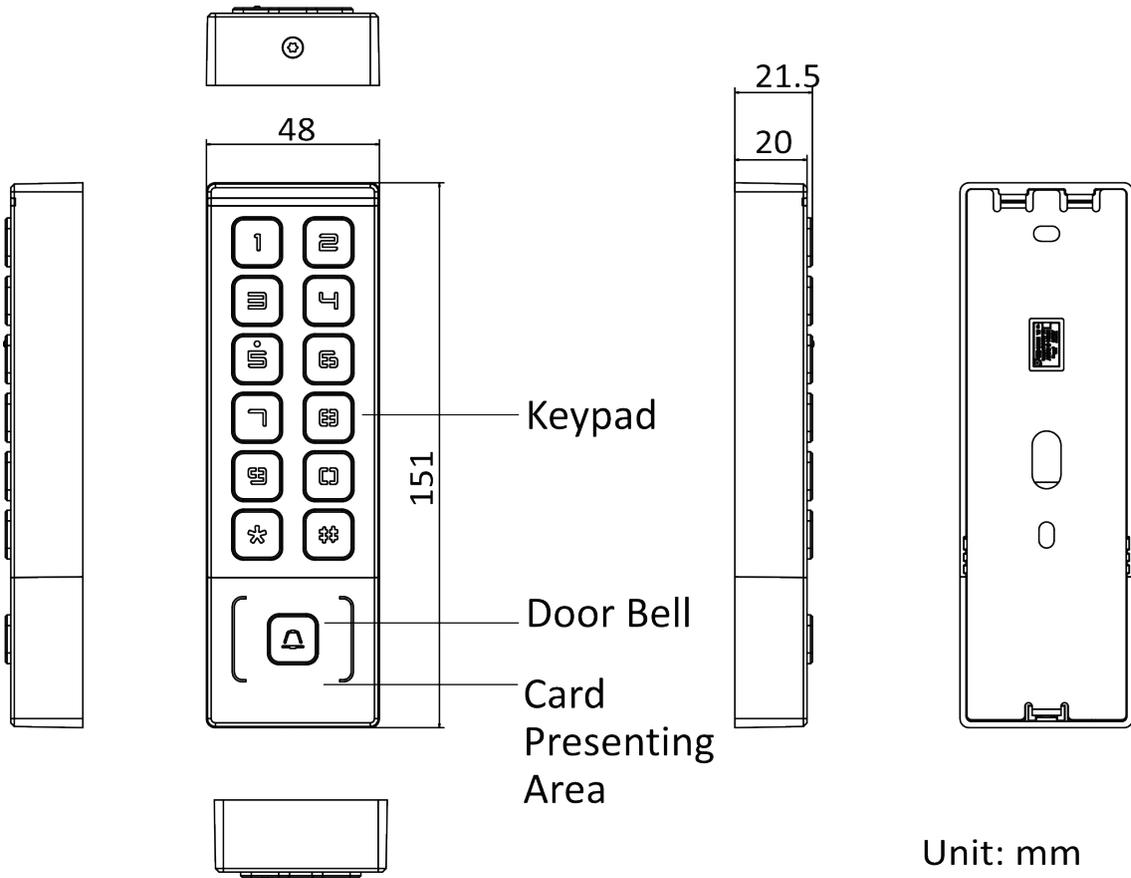


Figure 1-1 Access Control Terminal

Note

The pictures here are for reference only.

Chapter 2 Installation

2.1 Installation Environment

- The minimum bearing weight of the wall or other places should be 3 times heavier than the device weight.
- Please prepare the following tools and accessories: screwdriver (self purchased), screws, cables, and adapters (self purchased).

2.2 Surface Mounting

Steps

1. Attach the installation sticker to the wall about 1.45 m from the ground or the location where the device needs to be installed, and punch the hole according to the hole location (hole 1 and hole 2) on the sticker and wall.

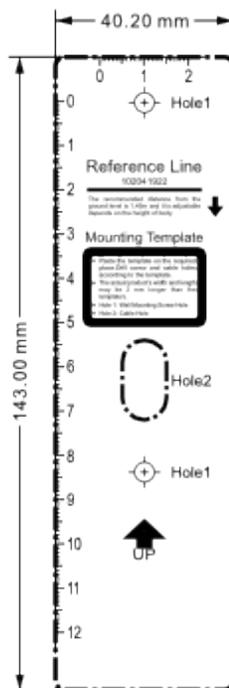


Figure 2-1 Installation Sticker

2. Insert the plastic sleeve of the provided expansion screw into the punched hole.

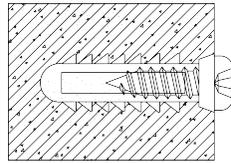


Figure 2-2 Insert Plastic Sleeve

3. Make sure the cables are threaded through the hole.

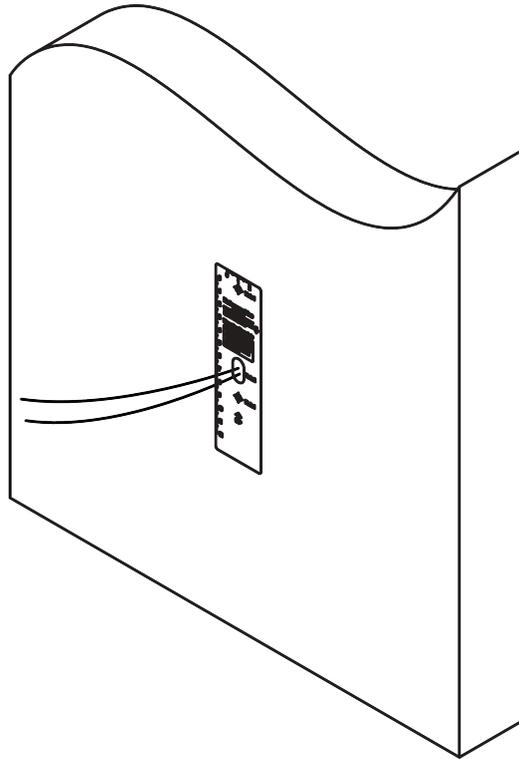


Figure 2-3 Thread Cables

4. Secure the mounting plate on the gang box with two supplied screws (PA4X25-SUS).

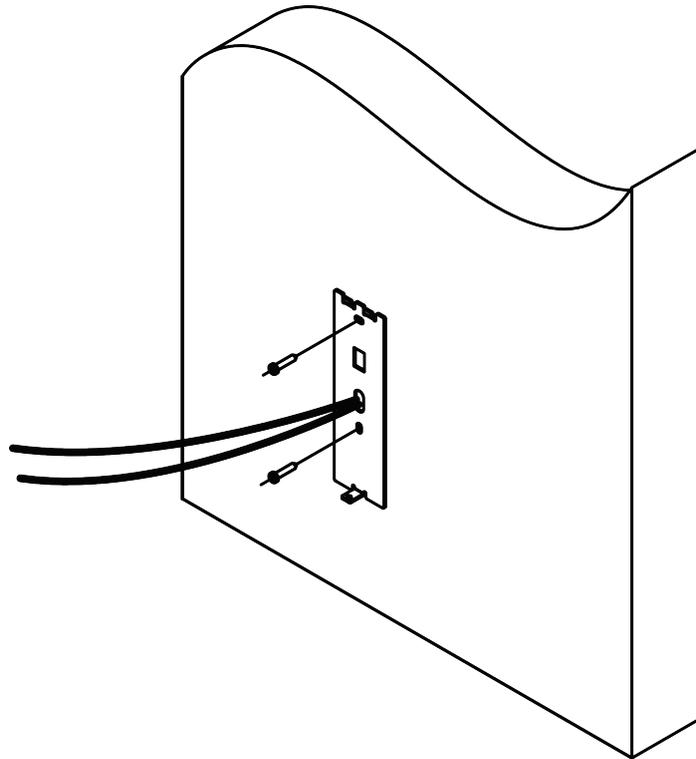


Figure 2-4 Secure Mounting Plate

5. Complete the wiring. See the wiring diagram for details.

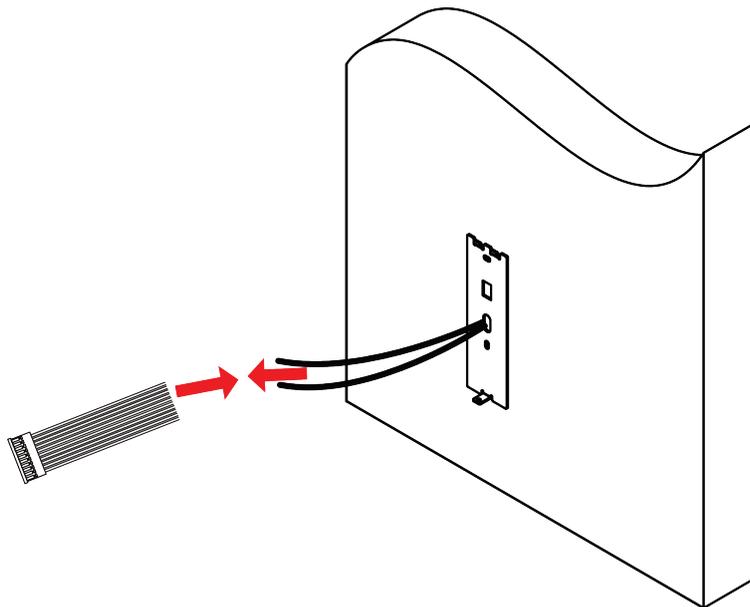


Figure 2-5 Complete Wiring

6. Hang the device into the plate from top to bottom. Secure the device on the mounting plate with 1 supplied screw (SC-KM3X6-T10-SUS).

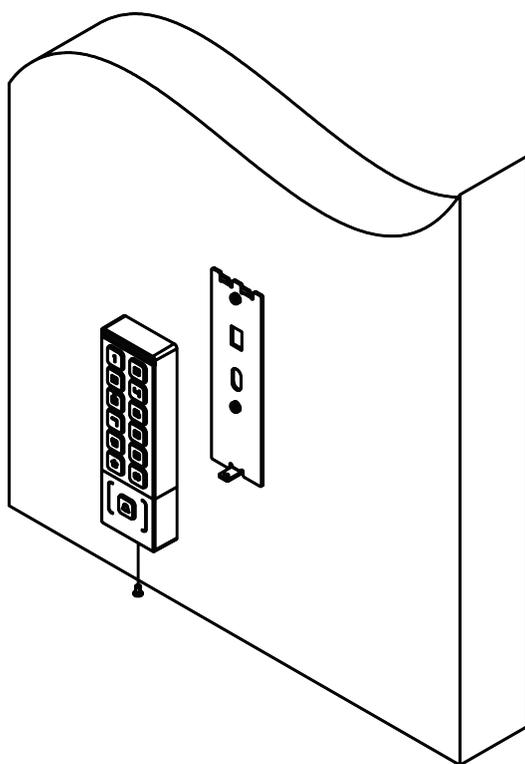


Figure 2-6 Secure Device

Chapter 3 Device Wiring

3.1 External Device Wiring

Wire the external device.

The wiring diagram is as follows.

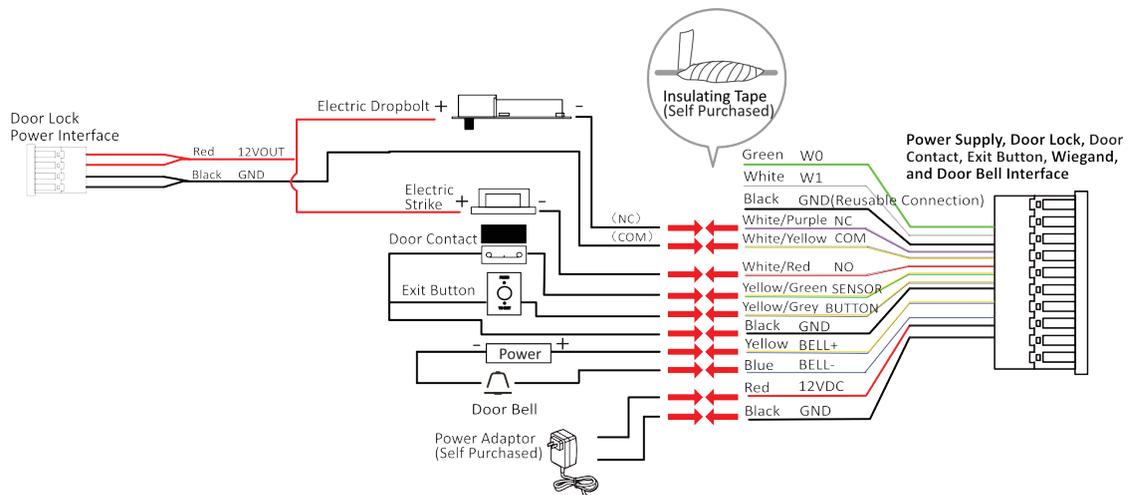


Figure 3-1 External Device Wiring

Note

- Use a DC 12 V power supply. Do not connect the device directly to the 220 V mains.
- The suggested external power supply for door lock is 12 V, 1 A.

Chapter 4 Operation Commands

4.1 Common Commands

Table 4-1 Common Commands Description

Module	Operation	Command	Description
Activate Device	Activate	[*][0][#] [Programming Password (6 to 8 Digits)] [Repeat Programming Password (6 to 8 Digits)] [#]	The 6 to 8 digits programming password cannot all be 0.
Programming Mode	Enter Programming Mode	[Programming Password (6 to 8 Digits)] [*][0][#]	/
	Exit Programming Mode	[*] [#]	/
	Change Programming Password	[00] [New Programming Password (6 to 8 Digits)] [Repeat New Programming Password (6 to 8 Digits)] [#]	/
Add Door Opening Credential	Set Door Opening Password	[03] [Door Opening Password (4 to 8 Digits)] [Repeat Door Opening Password (4 to 8 Digits)] [#]	/
	Add User Card	[01] [User Code (4 Digits)](Optional) [Swipe Card]...	If you choose to add a user code, you can save the added card to the user code location.
	Delete User Card	[02] [Swipe Card]...	/
	Add User Cards in Batch	[01] [User Code (4 Digits)](Optional) [Swipe Card 1][Swipe	/

Module	Operation	Command	Description
		Card 2][Swipe Card 3]...	
	Delete User Cards in Batch (Method 1)	[02] [Swipe Card 1] [Swipe Card 2][Swipe Card 3]...	/
	Delete User Cards in Batch (Method 2)	[15] [Programming Password (6 to 8 Digits)] [#]	/
	Delete User Code	[02] [User Code] [#]	/
	Delete User Codes in Batch	[02] [User Code] [#] [User Code] [#]...	/

4.2 Basic Commands

The device needs to be activated before it can be used. After activating, the device can be at two modes: normal mode and programming mode. After entering programming mode, the device can be operated by commands.

4.2.1 Activation

Command

Activate: [*][0][#] [Programming Password (6 to 8 Digits)] [Repeat Programming Password (6 to 8 Digits)] [#].

Note

The 6 to 8 digits programming password cannot all be 0.

Prompts Description

Indicator	Prompt Audio	Description
Light is solid green.	The buzzer rings for 3 s.	Activated , and in normal mode (not programming mode).
Light flashes red slowly for 3 times.	The buzzer rings for 5 times quickly.	Activating failed.
Light flashes orange slowly.	/	Inactivated

4.2.2 Enter and Exit Programming Mode

There are two ways to enter the programming mode: enter the command , or directly swipe the functional card (including management card, adding card and deleting card).

Programming Mode Command

Enter Programming Mode: [Programming Password (6 to 8 Digits)] [*][0][#].

Exit Programming Mode: [*] [#].

Change Programming Password: [00] [New Programming Password (6 to 8 Digits)] [Repeat New Programming Password (6 to 8 Digits)] [#].

Table 4-2 Prompts Description

Indicator	Prompt Audio	Description
Light is solid green for 2 s.	The buzzer rings 2 times quickly.	Enter Programming Mode
Light is solid red for 2 s.	The buzzer rings 3 times slowly.	Entering Programming Mode failed
/	The buzzer beeps 1 sound.	Swipe Card and Press Button Prompt Audio
/	The buzzer rings 2 times.	Exit due to timeout.

Note

- After 5 consecutive programming password input errors, the device will enter a locked status. After waiting for 1800 s or after the device losing power time cleared, you can enter the programming password again to enter the programming mode. Enter the programming password in the locked status, the indicator will be solid orange for 2 s, and the buzzer will ring 5 times quickly, indicating that it cannot enter the programming mode.
- In programming mode, "*" represents a fallback to programming mode without entering a command, and "# "Indicates the end or completion of a command.
- In programming mode, you need to press "*" to exit the batch addition and deletion mode.

Swipe Functional Card

After swiping the functional card in the card swiping area, you can directly enter the programming mode. See [Set Functional Card](#) for adding details.

4.3 Other Common Commands

4.3.1 Open Door

There are two ways to open door: enter the password, or swipe user card.

Prompts Description

Indicator	Prompt Audio	Description
Light is solid green for 2 s.	The buzzer rings 2 times quickly.	Authenticated
Light is solid red for 2 s.	The buzzer rings 3 times slowly.	Authentication failed.
/	The buzzer beeps 1 sound.	Swipe Card and Press Button Prompt Audio
/	The buzzer rings 2 times.	Exit due to timeout.

Set Door Opening Password

You can set the door opening password and open door by entering the door opening password.

Command

Command of Setting Door Opening Password: [03] [Door Opening Password (4 to 8 Digits)]
[Repeat Door Opening Password (4 to 8 Digits)] [#].



Note

The 4 to 8 door opening password cannot all be 0. If all of them are 0, the door opening password function will be disabled.

Add/Delete User Card

Command

Add User Card: [01] [User Code (4 Digits)] (Optional)[Swipe Card]...

Add User Card in Batch:[01] [User Code (4 Digits)](Optional) [Swipe Card 1][Swipe Card 2][Swipe Card 3]...



Note

- If you enter a user code before adding a card, the location of the added user card is under this code ID, and if you do not enter the user code, the added card has no fixed position.
 - The user code format is 4 digits and the range is from 1 to 1000. If the entered code content and format is incorrect, the addition fails, and the current adding command ends.
-

Delete User Code: [02] [User Code] [#].

Delete User Code in Batch: [02] [User Code] [#][User Code] [#]...

Delete User Card: [02] [Swipe Card].

Delete User Card in Batch (Method 1): [02] [Swipe Card 1] [Swipe Card 2][Swipe Card 3]...

Delete User Card in Batch (Method 2): [15] [Programming Password (6 to 8 Digits)] [#].

4.3.2 Set Functional Card

Functional cards include management card, adding card and deleting card.



Functional cards cannot be used to open door, but are only equivalent to a certain command.

Management Card

Swipe the management card in the standby status: it means that the device directly enters the programming mode, and there is no need to enter the command to enter the programming mode.

Command of Adding Management Card: [04] [Swipe Card].

Command of Deleting Management Card: [04][#].

Command of Adding Management Card, Adding Card and Deleting Card at Once: [10] [Swipe Management Card][Swipe Adding Card] [Swipe Deleting Card].



After swiping the management card to enter the programming mode, if the device is not operated for 30 s, it will exit programming mode. Swipe twice in 3 seconds to switch door contact settings. When switching the door contact, the buzzer ringing 8 times slowly means that the mode is switched to remain closed, and the buzzer ringing 8 times quickly means that the mode is switched to remain open.

Adding Card

Swipe the adding card in the standby status: it means that the device directly enters the programming mode, and enters the [01] command (adding command).

For example, if you need to add a user card, you can swipe the adding card and then swipe a user card when the device is in standby status.

Command of Adding Adding Card: [06] [Swipe Card].

Command of Deleting Adding Card: [07][#].



After swiping the adding card to enter the programming mode, if the device is not operated for 30 s, it will exit programming mode.

Delete Card

Swipe the deleting card in the standby status: it means that the device directly enters the programming mode, and enters the [02] command (deleting command).

For example, if you need to delete a user card, you can swipe the deleting card and then swipe a user card when the device is in standby status.

Command of Adding Deleting Card: [08] [Swipe Card].

Command of Deleting Deleting Card: [09][#].

Note

After swiping the deleting card to enter the programming mode, if the device is not operated for 30 s, it will exit programming mode.

4.4 Advanced Commands

4.4.1 Set Door Parameters

The door opening time, door opening timeout, door contact type and exit button type can be set by command.

Command: [11] [Data Bit 1] [Data Bit 2] [Data Bit 3] [Data Bit 4] [#].

Data Bit 1: Indicates the door opening time, which is a three digits number from 000 to 255. The unit is second. If the door opening time is 3 s, the data bit 1 is set to 003. The default door opening time is 5 s.

Data Bit 2: Indicates the door opening timeout, which is a two digits number. The unit is second. If the door is opened beyond this setting time, the device will alarm and ring for 10 s. If you enter "50", the alarm time for door opening timeout will be 50 s. The default door opening timeout is 30 s.

Data Bit 3: Indicates the type of door contact, which is a one digit number. "0" means remaining closed, and "1" means remaining open. It is remaining closed by default.

Data Bit 4: Indicates the type of exit button, which is a one digit number. "0" means remaining closed, and "1" means remaining open. It is remaining closed by default.

4.4.2 Set Voice Parameters

You can set whether to enable the button sound and authentication prompt audio through the command.

Command: [12] [Data Bit 1] [Data Bit 2] [#].

Data Bit 1: Indicates whether to enable the button sound, which is a one digit number. "0" means the button sound is disabled, and "1" means the button sound is enabled. It is enabled by default.

Indicates whether to enable the authentication prompt audio, which is a one digit number. "0" means the authentication prompt audio is disabled, and "1" means the authentication prompt audio is enabled. It is enabled by default.

Note

The disabling only takes effect in the normal mode, not in the programming mode.

4.4.3 Set NFC

You can set whether to enable NFC function through the command.

Command: [13] [Data Bit 1] [#].

Data Bit 1: "0" means disabling NFC function, and "1" means enabling NFC function. It is enabled by default.



Only some models support this function, please refer to the actual product.

4.4.4 Set Card Reader Wiegand Mode

The Wiegand mode of card reader can be set by command.

Command: [14] [Data Bit 1] [#].

Data Bit 1: "0" means Wiegand 26 mode, and "1" means Wiegand 34 mode. The default mode is Wiegand 34.

4.4.5 Restore to Default Settings

You can perform commands or press button to restore to default settings.

Command 1: [16] [Programming Password (6 to 8 Digits)] [#] (Only Restore Data Except User Cards Data).

Command 2: Press and hold the "*" button for 5 seconds within 30 seconds of powering on.

4.4.6 Restart Device

You can restart the device by command.

Command: [17] [Programming Password (6 to 8 Digits)] [#].

4.4.7 Restore to Factory Settings

You can restore the device to factory settings by command.

Command: [18] [Programming Password (6 to 8 Digits)] [#] (Restore All User and Default Data).

Appendix A. Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

- This product can only enjoy the after-sales service support in the country or region where the purchase is made.
- If the product you choose is a video product, please scan the following QR code to obtain the "Initiatives on the Use of Video Products", and read it carefully.



Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR

IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

Data Protection

- To protect data, the development of Hikvision Products incorporates privacy by design principles. For example, for Products with facial recognition features, biometrics data is stored in your Products with encryption method; for fingerprint Products, only fingerprint template will be saved, which is impossible to reconstruct a fingerprint image.
- As a data controller/processor, you may process personal data, including collection, storage, use, processing, disclosure, deletion, etc. You are advised to pay attention to and comply with applicable laws and regulations related to the protection of personal data, including without limitation, conducting security controls to safeguard personal data, such as, implementing reasonable administrative and physical security controls, conduct periodic reviews and the assessments of the effectiveness of your security controls.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Appendix B. Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

Appendix C. Dimension

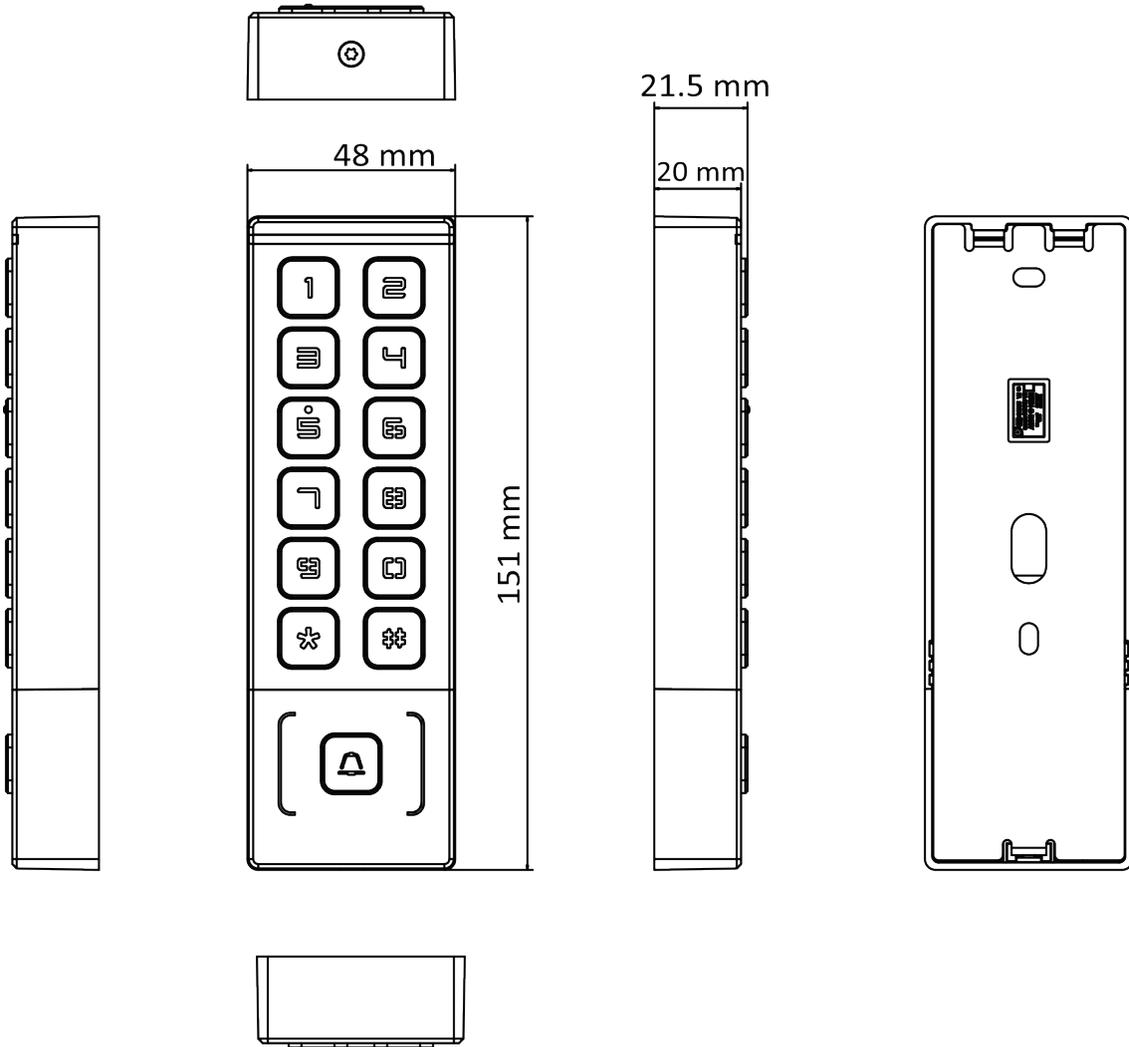


Figure C-1 Dimension

 **Note**

The pictures here are for reference only.



See Far, Go Further